




 


 
# 983v2 Static Locator





1. To turn on press  once.
2. Then select either continuous  or peak  mode as desired.
3. Before taking a measurement it is very important to zero the unit.
4. To zero, point unit away from all sources of static and press button  or  accordingly.
5. Measuring distance: 150mm from surface - screen displays distance to target with a "P" to help indicate correct distance.



6. Avoid measuring over rollers and surfaces plates



7. To re-zero unit when on:

Point unit away from all sources of static and press button  or  accordingly.

8. Changing Mode:

Press the relevant button to select either continuous  or peak  mode

9. To Turn Off:

Press  button.

Note: auto shut down activates after 60 seconds in either mode.