



Operating Manual

Model 915


Shockless AC Bar

Contents

Introduction	3
Inspection	4
Operation	5
Installation	6
Technical Data and Construction	9
Maintenance	10
Fault Finding	11
Repairs and Warranty	16
CE Approval	17
UL Certification	17
Health and Safety	17

Products shown in this document may be covered by one or more patents, patents applied for and/or registered designs and/or trade marks. For further information please refer to our Head Office or visit www.meech.com.

Introduction

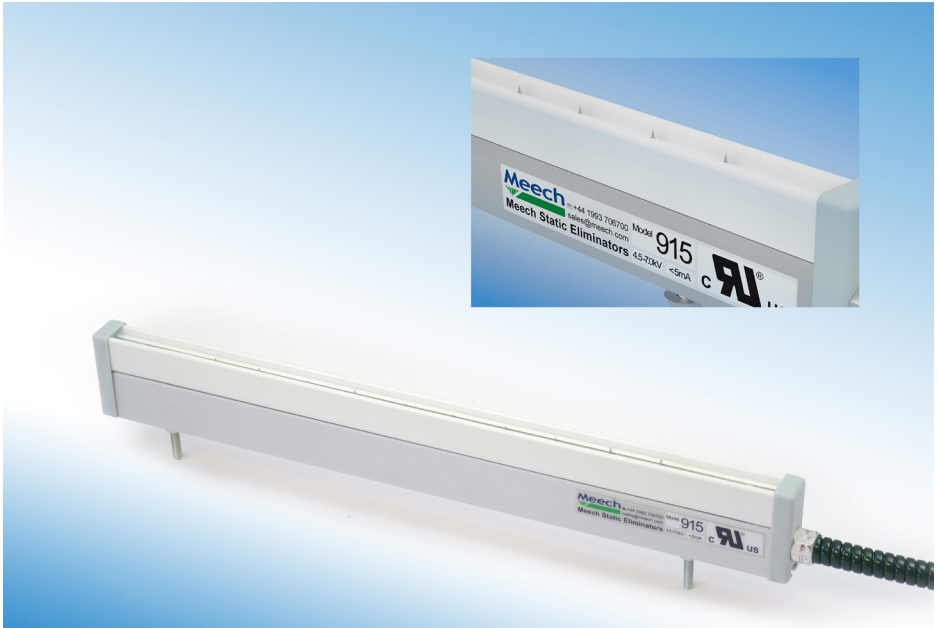


The Meech Model 915 has been designed for use on the most arduous static elimination problems. The special resistive coupling of its emitter pins renders them shockless, whilst giving powerful static neutralisation performance. This enables the bar to eliminate very high static charges on high speed webs and at longer ranges than has previously been possible.

Inspection

The Model 915 Bar was carefully packed at the factory. Nevertheless, we recommend careful examination of the carton and contents for any damage. If damage is evident, keep the packing material and immediately notify the carrier of a possible damage claim. Shipping claims must be made by the consignee to the delivering carrier.

Operation

The typical Meech Model 915 installation consists of one or more bars connected to a Meech Model 904 Power Unit.

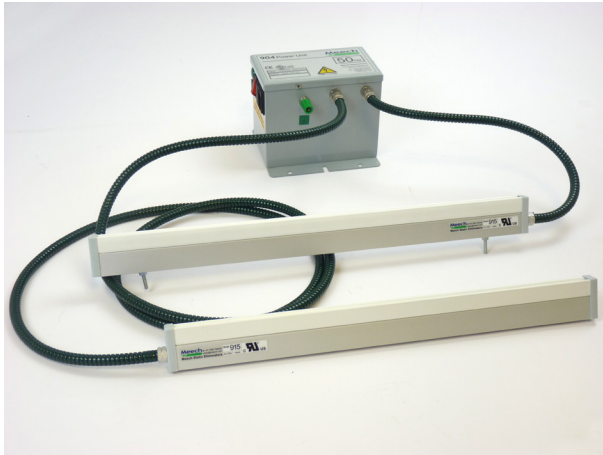

The Power Unit converts the electrical supply into a high voltage, low amperage output. This output energy is transferred to the 915 bar by the HT cable.

The resistively coupled electrodes are energised by the AC voltage from the Power Unit. The electrodes emit this energy (corona discharge) in the form of a field of ionised air. This ionised air supplies ions of both polarities.

Electrostatically charged products which pass through this corona are immediately neutralised and become static free.

Under test conditions, the Meech Model 915 has been found to give charge decay times that are up to eight times faster than standard AC shockless eliminator bars.

Installation


The 915 Bar can be placed between 25mm and 150 mm from the surface to be neutralised. It is important to ensure that the target surface has free air on both sides and that earthed metal objects are, where possible, at least 20 mm away from the bar. These precautions will maximise the unit's ionisation capability.

Good results can be achieved at distances up to 150mm but as the distance from the object increases, the speed of charge neutralisation will decrease.

A typical installation distance is 50mm from the target surface. This gives excellent performance at high web or product speeds, whilst avoiding possible damage from web breaks or product mis-feeds. Very fast webs may require the bar to be as close as 25mm to the web.

Correct positioning of the bar(s) is vital to efficient operation. The following diagrams show the correct installation procedures:

1. The optimal distance from material to be neutralised.




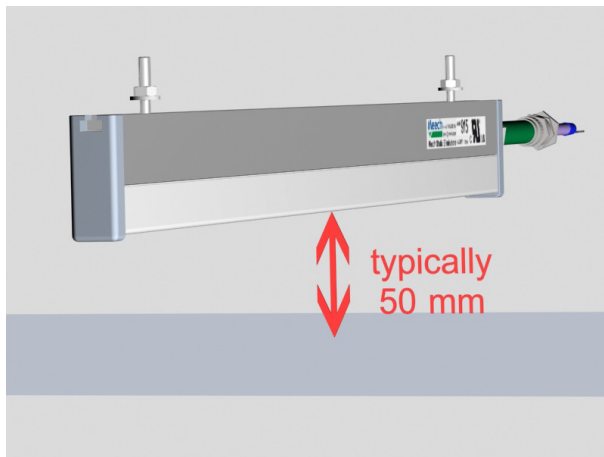


Mounting of the bar is by 20mm M4 studs mounted in a track at the rear of the bar. These can be slid to any point along the bar's length to meet the machine's available fixing points.


The chassis of the bar is electrically connected to ground on the power unit via the flexible armoured conduit. However, it is good practice to provide a secondary grounding through the fixing points where practical.

The HT cable and armoured conduit require connection to a Meech model 904 power unit. Please consult the 904 instruction manual for further instruction.


1. Free space is required on opposite sides of the target material, not a roller or solid object.

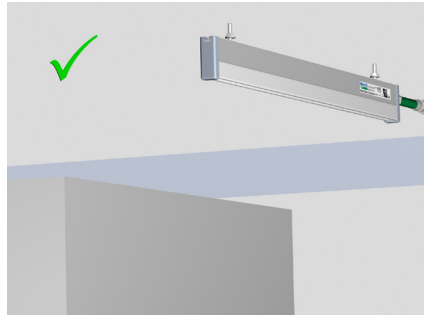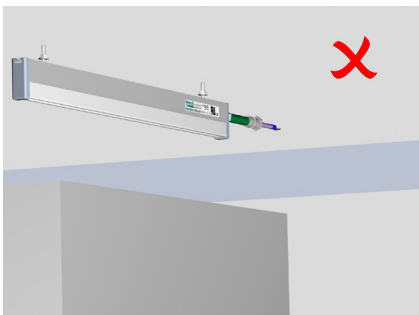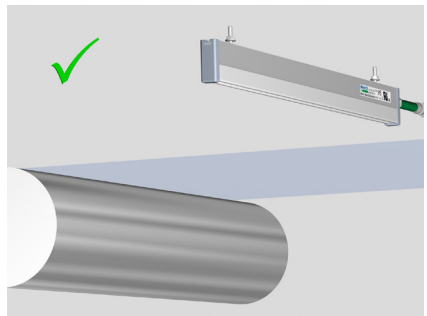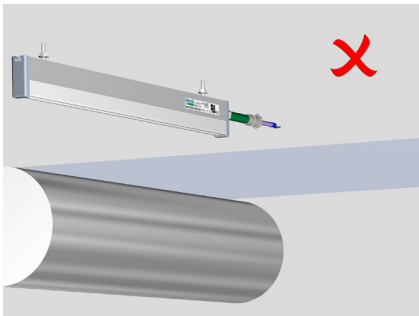

2. Avoid proximity to earthed parts of machinery as this will distort the corona and reduce its efficiency.

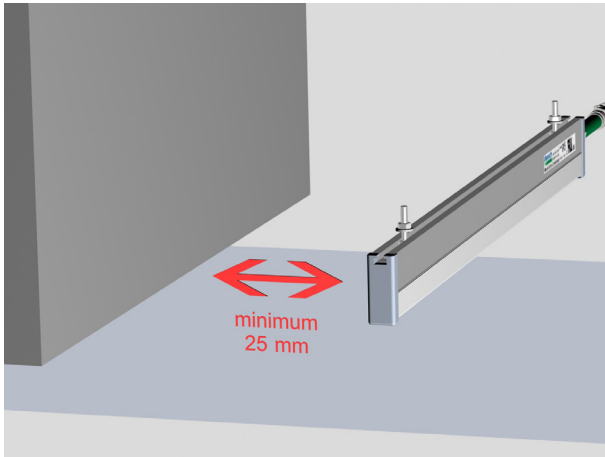

3. If bars are needed on both sides of the material, they should be staggered.

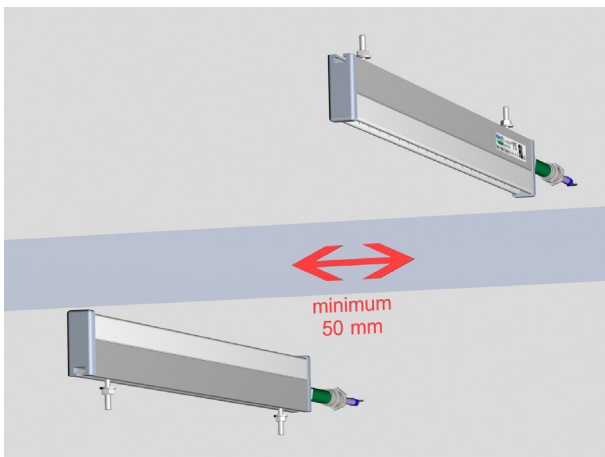

4. The bars must be earthed for correct operation. If in any doubt run an earth wire from the bar to the earth stud on the Power Unit.

Technical and Construction

Operating voltage:	4.5 - 7.0 kV
Max temperature:	60°C
Length :	Available in lengths from 80 mm to 4000 mm. Overall length is 60mm greater than the effective length.
Cable:	2 metres shielded in flexible conduit; longer lengths can be ordered.
Weight:	Approx 1,100gms per 1000mm length
Cross section:	18mm x 42mm (inc. of end caps)
Construction:	Anodised aluminium and fire retardant PVC extrusion.
Emitter Points:	Titanium
Mounting:	M4x20mm studs. These are located in a channel to provide universal mounting points.
Operating range:	30 - 150mm

Maintenance

Ionising bars become contaminated with usage. Dirt build-up on the body of the ioniser and, particularly on the pins, will cause a drop in performance. To get the best from your bar, it should be cleaned as part of regular machine maintenance.

Before cleaning, ensure that the equipment is switched off.

Emitter pins can be cleaned very effectively with a brush. A dry toothbrush is ideal.



Ionising bars will need periodic wiping to clean grey deposits from the surface of the bar. A cloth moistened with a small amount of IPA or methylated spirits is recommended. Allow to dry before turning back on.



Fault Finding

Tests must be completed by a qualified electrical engineer.

If in doubt please contact Meech head office or your local distributor.

CAUTION: Whilst no danger to personnel exists, it is essential that (with the exception of bars with a water resistant option) high voltage ionising equipment, makes no contact with water or water based fluids. Should such an event occur, disconnect immediately and return equipment to the manufacturer for water damage assessment.

The Model 915 ionising bar forms part of a system, comprising the bar itself and a Model 904 Power Unit.

To verify where a fault may have occurred it is important to test each item of the system individually. Should more than one bar be connected to a power unit, these must be tested individually.

To check the Model 915 bar follow the procedure detailed below.

1. Switch off the electrical supply to the system and disconnect the IEC plug.




2. Disconnect all ionising bars from the power unit.



3. Follow the test procedure for the Model 904 Power Unit. This can be found in the instruction manual of the Model 904.




4. Having checked the power unit reconnect one Model 915 ionising bar.
5. Using a high voltage probe and meter measure the voltage on the pins of the ionising bar. This voltage should be approximately 6.5 kV.

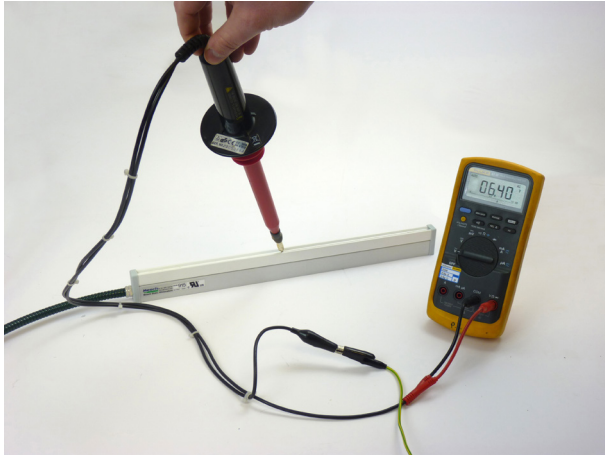


6. If the voltage is below 4.0 kV then the bar should be returned to Meech for service and/or repair.
7. If no meter and probe is available, then a fast and simple test can be undertaken by shorting a pin of the bar to earth.


- Attach a short length of insulated wire to either fixing stud on the bar.

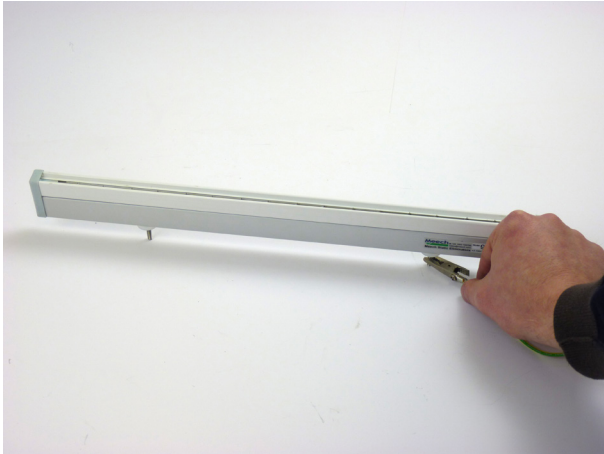

- Holding the wire insulation, approach any of the bar emitter pins with the bare end of the wire.

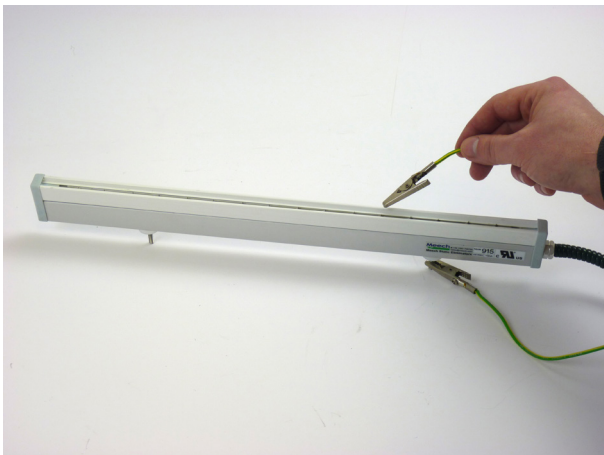

- As the pin is approached, a small faint spark should jump from the pin to the wire.

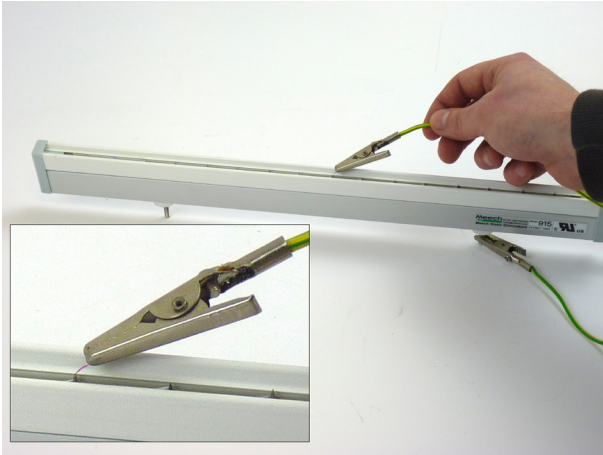

- As the spark is drawn a slight buzzing sound will also be heard. This indicates that the bar is functioning correctly.

8. If there is more than one bar to test, disconnect the first item and repeat the above steps with subsequent bars.

Repairs And Warranty

The 915 bar is warranted by Meech Static Eliminators Ltd to the original purchaser against defects in material and workmanship for one year after purchase. Should any malfunction occur, please return the bar directly to Meech Static Eliminators or your local distributor. All products returned to the factory MUST be accompanied by a return authorisation number and must be shipped prepaid. For prompt service, ship the unit to the factory with the return authorisation number shown clearly on the label. Be sure it is well packed in a sturdy carton with shock absorbing material.

Include a note stating the nature of the problem as specifically as possible, and also include instructions for returning the bar to you. We will pay one-way return surface shipping costs on any repairs covered under the warranty.

Field repairs should not be undertaken during the warranty period. Repair attempts by unqualified personnel will invalidate the warranty.

CE Approval

An EC Declaration of Conformity for this product exists in respect of the Low Voltage Directive: 72/23/EEC (“LVD”) & Electromagnetic Compatibility Directive: 89/336/EEC (“EMCD”)



UL Certification

The Meech 915 has been granted UL certification. UL is a global leader in testing, inspection, certification, auditing and validation.



Health and Safety

Emission of Ozone: Considerably below international standard of 0.1 ppm.



Meech International

2 Network Point
Range Road, Witney
OX29 0YN, UK

Tel: +44 (0)1993 706700
Fax: +44 (0)1993 776977
email: sales@meech.com

Meech Static Eliminators (Shanghai) Co. Ltd

7G, 7F, LP Tower
#25 Xiangfeng Road
201103 Shanghai
China

Tel: +86 400 820 0102
Fax: +86 21 6405 7736
email: china@meech.com

Meech Static Eliminators USA Inc

2915 Newpark Drive
Norton, OH 44203
USA

Tel: +1 330 564 2000 / 1 800 232 4210
Fax: +1 330 564 2005
email: info@meech.com

Meech Shavotech

29/2, Kharadi
Off Pune-Nagar Road
On Old Kharadi Mundhwa Road
Pune - 411014 , Maharashtra
India

Tel: +91 (0)703 093 8211 / +91 (0)741 000 4817
Fax: +91 (080) 28395963
email: india@meech.com

Meech Elektrostatik SA

Kaiserbaracke 166
B-4780 St.Vith
Belgium

Tel.: +49 (0)6555 3733 399
+32 (0)80 670 204
Fax: +32 (0)80 862 821
email: mesa@meech.com

Meech International (Singapore) Pte. Ltd.

7 Temasek Boulevard
12 - 07 Suntec Tower One
Singapore
Singapore
038987

Tel: +65 65918859
email: singapore@meech.com

Meech CE

Gábor László utca 2
Budapest 1041
Hungary

Tel: +36 1 7977039
+36 30 2803334
email: ce@meech.com